

Reduction / Amine Tail Gas Treaters with Model 931 / 932 Analyzers

AMETEK's combined sulfur and hydrogen analyzers bring cost-effective analysis for optimal control of tail gas treaters, with the performance and reliability you have come to expect from Western Research.

Process Overview

The Claus sulfur recovery process is limited to 97-98% overall recovery efficiency because of the equilibrium nature of the reaction. In order to meet required SO₂ emission levels, many sulfur recovery units (SRUs) are followed by a tail gas treater (TGT). By far the most common TGTs are variations of the reduction/amine type, each having a proprietary feature or solvent. The most common trade names include "Resulf", SCOT, FLEXSORB SE and BSR-MDEA.

In the standard process all of the unreduced sulfur components (SO₂,

COS, CS₂, S vapor and S liquid) are catalytically converted to H₂S in a **reduction reactor**. After cooling, the H₂S is selectively absorbed from the tail gas by means of an amine solvent or **absorber**. In the amine **regenerator**, the bulk of the H₂S is desorbed from the solvent and recycled back to the front end of the Claus SRU. The off-gas from the top of the absorber, containing residual H₂S and traces of COS / CS₂, is incinerated to SO₂. The emission is typically limited to less than 250 ppm of SO₂, but versions that reduce emissions to 50 ppm and even 10 ppm of sulfur compounds are common.

Analytical Requirements


Primary Measurements

The basic analyzer requirements are to measure H₂ at the outlet of the reduction reactor and the H₂S at the

top of the absorber. Both of these measurements can be made at the top of the absorber as the H₂ content does not change after the reactor.

- The H₂ measurement is to maintain excess H₂ after the reduction reactor, typically 2 – 4%, which ensures complete reduction. Insufficient H₂ causes SO₂ breakthrough to the amine solvent which will react to form heat stable salts and degrade the amine.
- The H₂S measurement is to ensure the process is operating efficiently and the emission limit is being met. Historically, these measurements required two analyzers, or a gas chromatograph with three-minute cycle time. The AMETEK model 931 analyzer can do both measurements on a continuous basis.

Tail Gas Treatment Unit

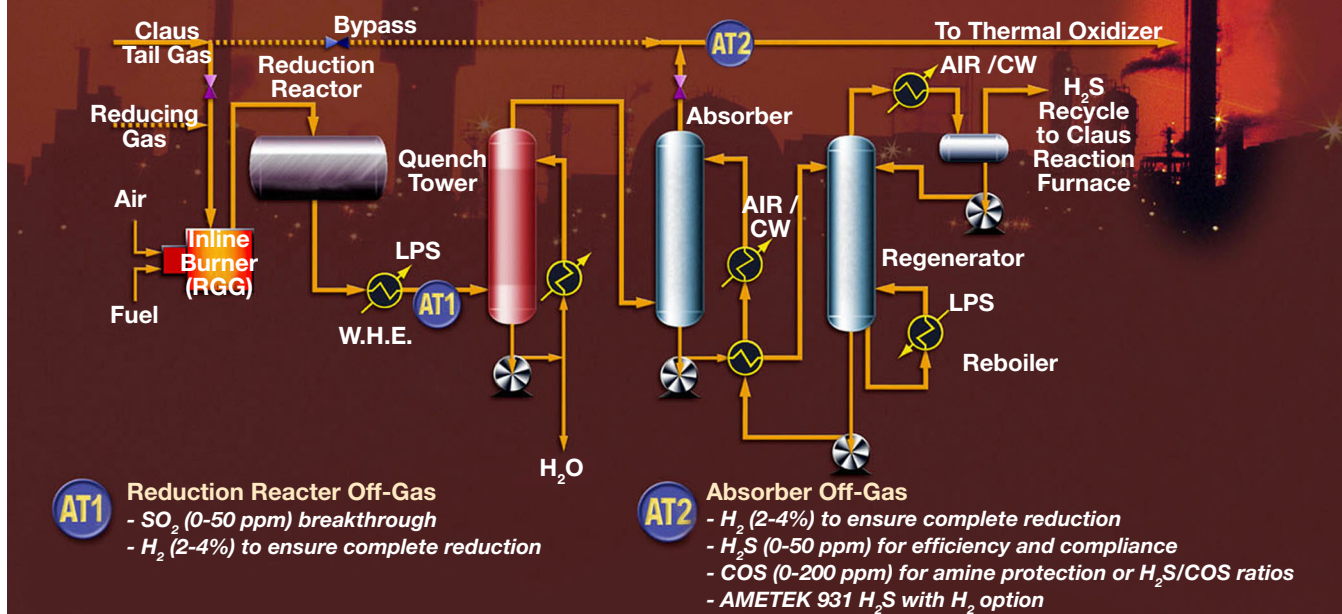

Secondary Measurements

The level of SO₂ breakthrough in the reduction reactor off-gas along with the COS concentration in the absorber outlet are also important measurements for optimum control.

- Directly measuring the SO₂ concentration after the reduction reactor can give faster results than using the excess H₂, or the pH of the quench water, to prevent SO₂ breakthrough. The analyzer can be combined with H₂ in the 931 analyzer so both components can be measured after the reduction reactor.
- The COS concentration at the outlet of the absorber is of interest because the selective amines used in the TGT have a limited absorptivity for COS. It can be very useful to know the contribution of H₂S and COS to the SO₂ emission. The model 932 can measure two or more sulfur gases as well as H₂ from any one sample point.

Analytical Capability of the Model 931 / 932 Analyzer


The model 931 / 932 is based on the 900 series ultraviolet (UV) photometer that is extensively used in SRU tail gas, feed gas, and stack gas applications. A thermal conductivity (TC) detector is integrated into the UV sample cell for the continuous measurement of hydrogen. The no-moving-parts UV light bench is used for single gas measurement or the multi-wavelength analyzer for a combination of sulfur gases.

Possible Combinations

- H₂S:** 0 - 50 ppm / 0 - 500 ppm / 0 - 5% (higher ranges available)
- H₂S + H₂:** H₂ 0 - 5% / 0 - 10%
- H₂S + COS or CS₂:** COS / CS₂ 0 - 500 ppm minimum range
- COS or CS₂:** 0 - 200 ppm as primary measurement
- H₂S + H₂ + COS or CS₂ or SO₂:** SO₂ 0 - 50 ppm
- SO₂ + H₂:** H₂ 0 - 5% / 0 - 10%
- H₂S + NH₃:** for sour water stripper (SWS) feed gas

Benefits

- Fast response; both detection principles (UV, TC) are continuous and instantaneous. Response time <30 seconds compared to three minutes or more for gas chromatographs.
- Single sample point and one sample system for multiple measurements
- Safety; the unique "HAG" (heated acid gas) probe containing the pipe-mounted sample system components, can be completely isolated from the process on both the sample and vent legs of the analyzer. This allows the entire sample system to be back-purged before maintenance.
- No consumables, no carrier gas
- Combined spares and maintenance with other series 900 analyzer used in the SRU

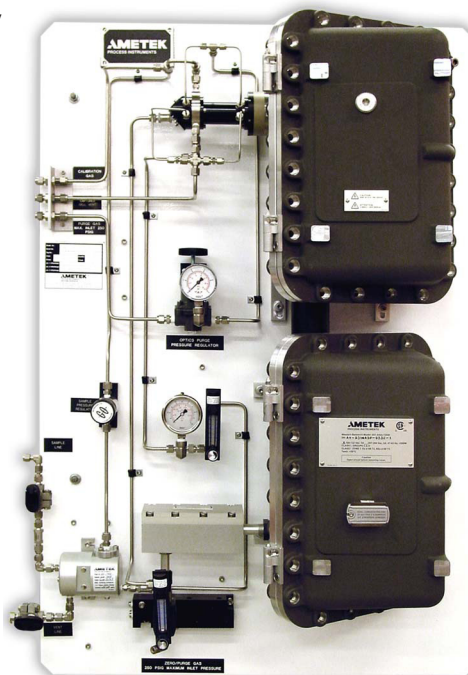

Summary

The 900 series light bench is the most precise UV spectrophotometer used in process analytics. Recent developments allow for single digit ppm measurement of multiple sulfur gases and the addition of a second detection principle (in this case, thermal conductivity for H₂). No one knows sulfur recovery as well as AMETEK Western Research; and this addition to the family allows for a single source of feed gas, tail gas, TGT tail gas and sulfur train emission analyzers all from one manufacturer.

AMETEK®
PROCESS INSTRUMENTS

2876 Sunridge Way N.E., Calgary, AB T1Y 7H9
Ph. 403-235-8400, Fax 403-248-3550
www.ametekpi.com



© 2007, by AMETEK, Inc.
All rights reserved. Printed in the U.S.A.
931/932 App Note (06/04/07)

Specifications subject to change without notice.

SALES AND MANUFACTURING:

USA - Delaware
455 Corporate Blvd., Newark DE 19702 • Tel: 302-456-4400, Fax: 302-456-4444
USA - Oklahoma
2001 N. Indianwood Ave., Broken Arrow OK 74012 • Tel: 918-250-7200, Fax: 918-459-0165
USA - Pennsylvania
150 Freeport Road, Pittsburgh PA 15238 • Tel: 412-828-9040, Fax: 412-826-0399

WORLDWIDE SALES AND SERVICE LOCATIONS:

USA - Texas
Tel: 281 463 2820, Fax: 281 463 2701
CHINA
Beijing / Tel: 86 10 8526 2111, Fax: 86 10 8526 2141
Chengdu / Tel: 86 28 8675 8111, Fax: 86 28 8675 8141
Shanghai / Tel: 86 21 6426 8111, Fax: 86 21 6426 7818

FRANCE
Tel: 33 1 30 68 89 20, Fax: 33 1 30 68 89 29
GERMANY
Tel: 49 21 59 91 36 0, Fax: 49 21 59 91 3639
MIDDLE EAST - Dubai
Tel: 971 4 881 2052, Fax: 971 4 881 2053
SINGAPORE
Tel: 65 6484 2388, Fax: 65 6481 6588